


HARNESS LAYOUT

Engine Harness (Cont'd)

YD ENGINE

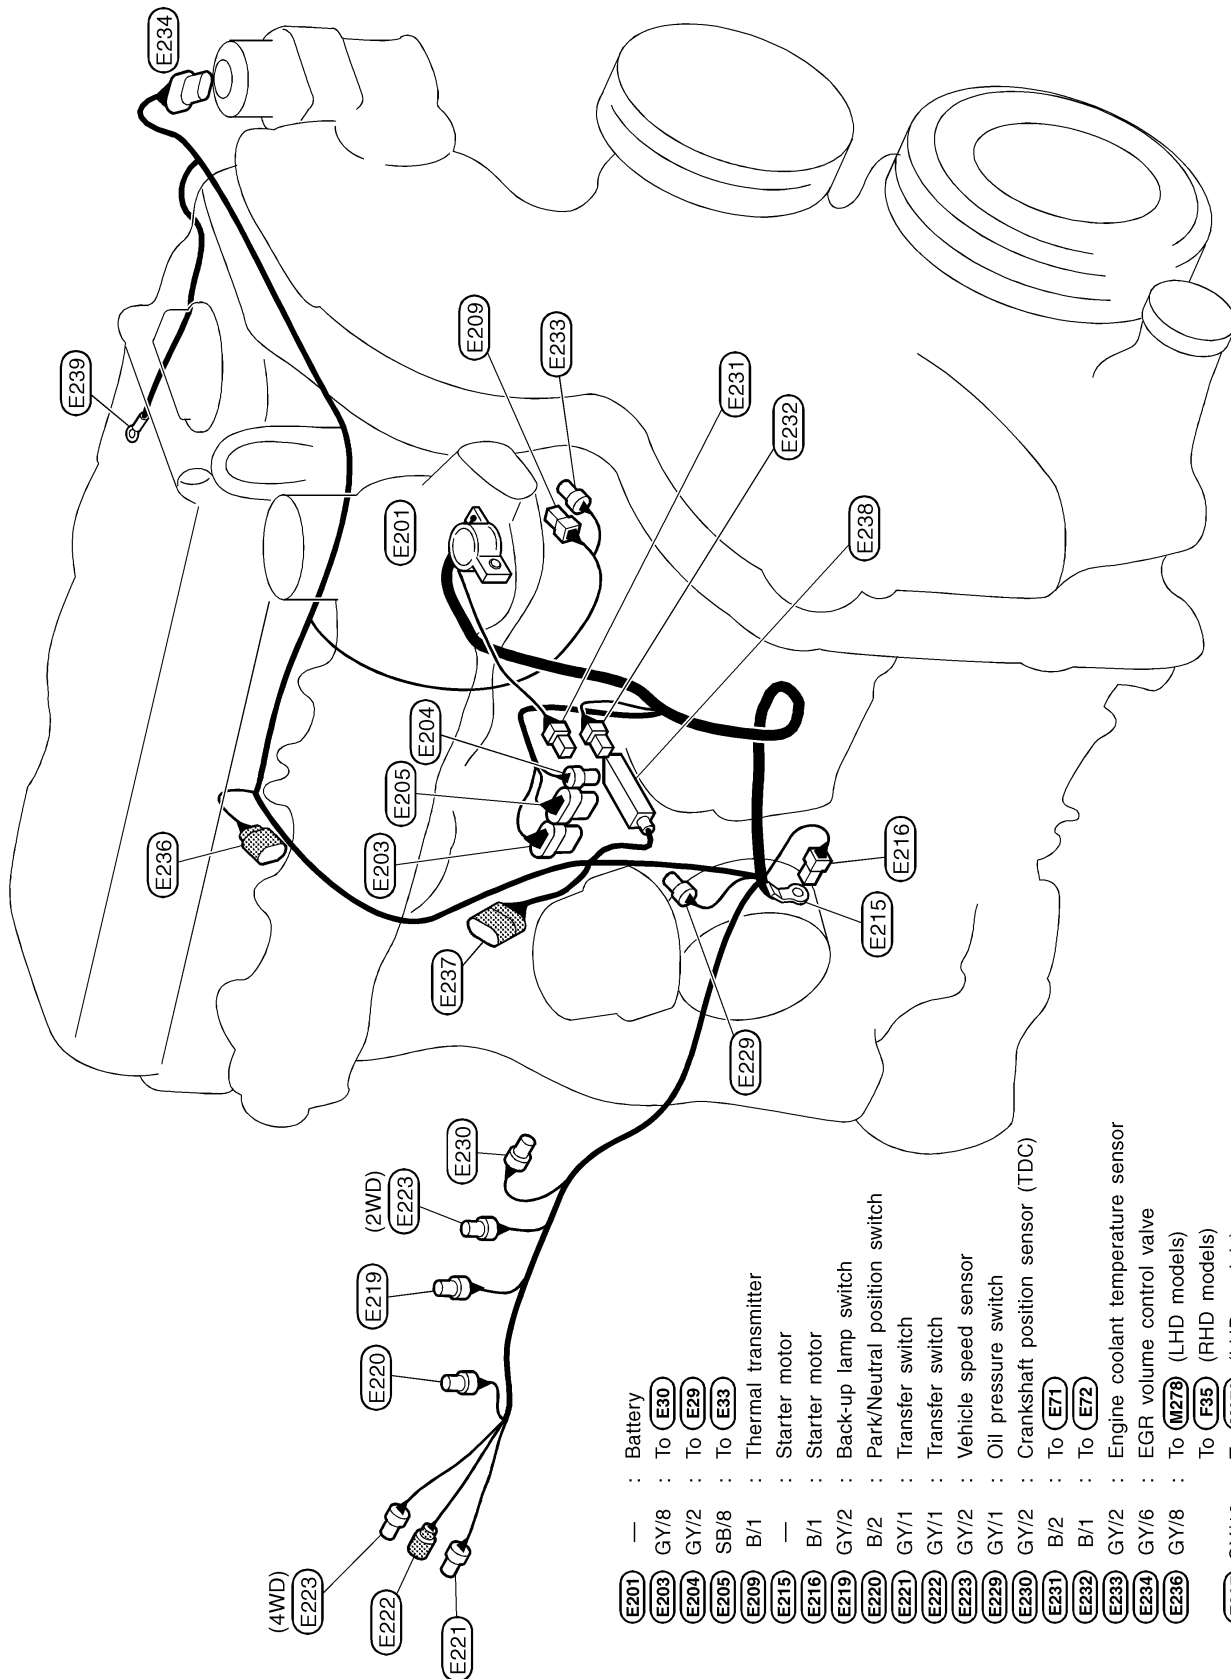

(E201)	—	:	Battery
(E203)	GY/8	:	To (E30)
(E204)	GY/2	:	To (E29)
(E205)	SB/8	:	To (E33)
(E209)	B/1	:	Thermal transmitter
(E215)	—	:	Starter motor
(E216)	B/1	:	Starter motor
(E219)	GY/2	:	Back-up lamp switch
(E220)	B/2	:	Park/Neutral position switch
(E221)	GY/1	:	Transfer switch
(E222)	GY/1	:	Transfer switch
(E223)	GY/2	:	Vehicle speed sensor
(E229)	GY/1	:	Oil pressure sensor
(E230)	GY/2	:	Crankshaft position sensor (TDC)
(E231)	B/2	:	To (E71)
(E232)	B/1	:	To (E72)
(E233)	GY/2	:	Engine coolant temperature sensor
(E234)	GY/6	:	EGR volume control valve
(E236)	GY/8	:	To (M278) (LHD models)
			To (F35) (RHD models)
(E237)	GY/10	:	To (M279) (LHD models)
			To (F36) (RHD models)
(E238)	B/9	:	Electronic control fuel injection pump
(E239)	—	:	Glow plug

HEL880B