

LITEON[®]

LITE-ON AUTOMOTIVE EUROPE B.V.
LITE-ON Group


**CRUISE
CONTROL**

Instruction Manual for


CM-30

CM-35

Command Module

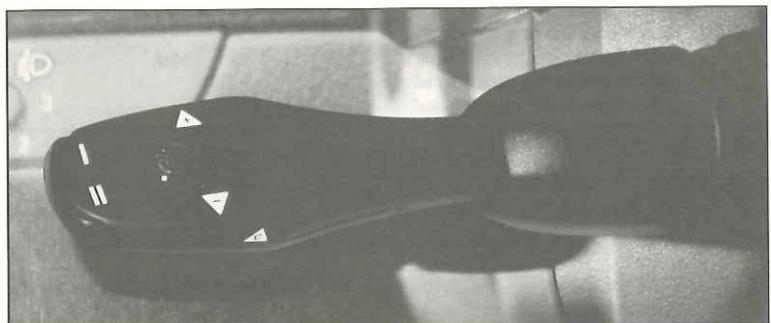

1. Contents

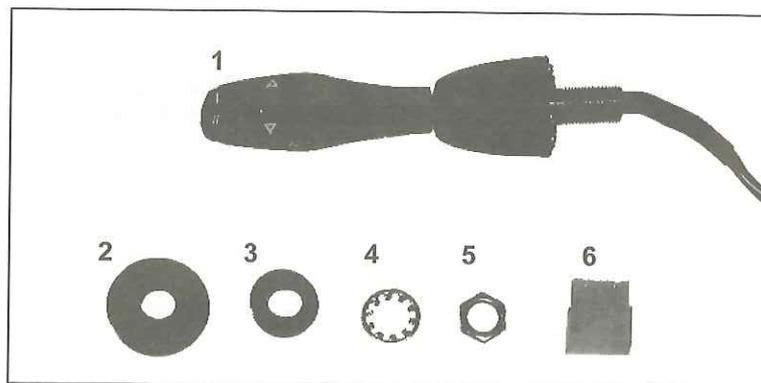

Item	Description	QTY
1	Command Module CM-30/35	1
2	Adapter bus external	1
3	Adapter bus internal	1
4	Spring washer	1
5	Nut M10	1
6	Connector housing 8-pin	1

2. Installation


The CM-30/35 is a universal Command Module that can be installed in many locations on the steering wheel column.

- 1) Determine the optimal location for the Command Module (1) for easy reach by the driver and where it secure can be installed.
- 2) De-assemble the steering wheel column cover.
- 3) Drill a hole (diameter 10mm).

CAUTION: Before drilling any holes, make sure there are no parts or wires behind the selected location, which might interfere or be damaged by installing the Command Module.

- 4) Shift the External Adapter Bus (2) over the thread axe (1) and rotate it in the correct position.
- 5) Put the wires and thread axe through the hole.
- 6) Place the Internal Adapter (3), the Spring Washer (4) and tighten the Nut (5) firmly.
- 7) Guide the wiring to Cruise Control Harness and secure it.
- 8) Re-assemble the Steering wheel cover and ensure that that wires run free and that the Command Modules is located correctly.

- 9) Insert the terminals into the connector housing (6), according to the colours marked on the connector.

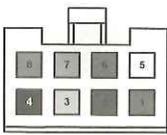
Connector	Pin	Description	Colour
	1	2-Memory	Blue
	2	On/Off	Brown
	3	Set/Resume	Yellow
	4	Ground	Black
	5	NC	White
	6	On LED	Red
	7	Coast / Engaged LED	Green
	8	Ignition +15	Orange

- 10) Plug the connector in the 8-pin connector of the wiring harness of the Cruise Control System.

3. Operation

3.1 Cruise Control

For CM-30 and CM-35 Push or Pull the handle for Cruise Control functions.

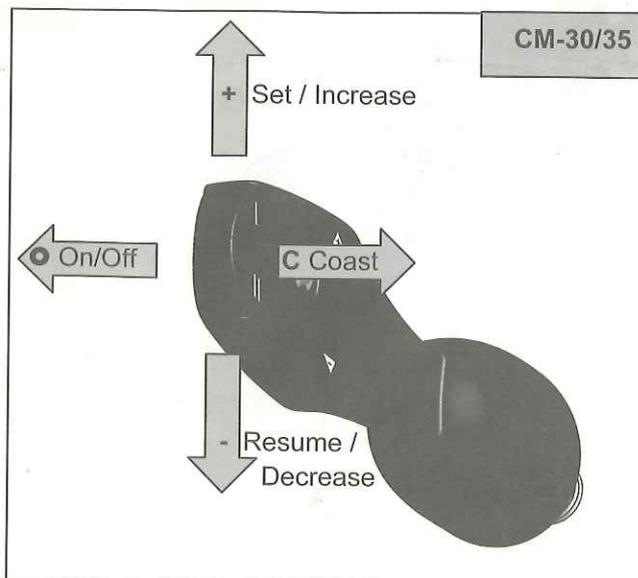

LITEON[®]

LITE-ON AUTOMOTIVE EUROPE B.V.
LITE-ON Group

3.2 Memory Function (CM-35 only)

CM-35 has a double Memory function.

Memory Programming

- 1) Switch On the Cruise Control (Green LED).
- 2) Drive the desired speed, for example 80 km/hr.
- 3) Press and hold button Memory I or II till a BEEP is heard.

Select Memory Speed

- 1) Switch On the Cruise Control.
- 2) Press button I or II.

